



Rechargeable and Waterproof Training Collar Operating Guide

Please read this entire guide before beginning

Model Number:

IS-PET998DB 1 for 1



Model Number:

IS-PET998DB 1 for 2



Important Safety Information

WARNING

Not for aggressive dogs. Do not use this product if your dog is aggressive, or if your dog is prone to aggressive behavior. Aggressive dogs can cause severe injury and even death to their owner and others. If you are unsure whether this product is appropriate for your dog, please consult your veterinarian or certified trainer.

CAUTION

Risk of skin damage. Please read and follow the instructions in this manual. Proper fitness of the collar is important. A collar worn for too long or made too tight on the pet's neck may cause skin damage. Ranging from redness to pressure ulcers; this condition is commonly known as bed sores.

- Avoid leaving the collar on the dog for more than 12 hours per day.
- If possible reposition the collar on the pet's neck every 1 to 2 hours.
- Check the fitness to prevent excessive pressure; follow the instruction in this manual.
- Never connect a lead to the electronic collar, it will cause excessive pressure on the contacts.
- When using a separate collar for a lead, don't put pressure on the electronic collar.
- Wash the dog's neck area and the contacts of the collar weekly with a damp cloth.
- Examine the contact area daily for signs of a rash or a sore.
- If a rash or sore is found, discontinue use of the collar until the skin has healed.
- If the condition persists beyond 48 hours , see your veterinarian.

These steps will help your pet safe and comfortable. Millions of pets are comfortable while they wear stainless steel contacts. Some pets are sensitive to contact pressure. You may find after some time that your pet is very tolerant of the collar. If so, you may relax some of these precautions. It is important to continue daily checks of the contact area. If redness or sores are found, discontinue use until the skin has fully healed.

Thank you for choosing Pettrainer Rechargeable and Waterproof Training Collar. Our mission is to ensure your pet's safety by providing you the tools and techniques to successfully train your pet.

Table of Contents

Compsments	4
Key Definition	5
Features	6
How the Pettrainer Rechargeable and Waterproof Training Collar Works	7
Operating Guide	7
Prepare the Remote Transmitter	7
Prepare the Receiver Collar	8
Encode between Remote Transmitter and Receiver Collar	9
To Test Pettrainer Rechargeable and Waterproof Training Collar	10
Fit the Receiver Collar	12
Re-Thread the Collar	13
Regular Maintenance	13
Frequently Asked Questions	14
Troubleshooting	16
Finde the Best Intensity Level for Your Pet	17
Common size of different dogs	18
Common weight of dogs	18

 
WARNING

Please charge before using the product!


If the transmitter and receiver collar don't work for a long time, you should charge it fully before keeping it idle, and charging it every one month.

Components


IS-PET998DB 1 for 1

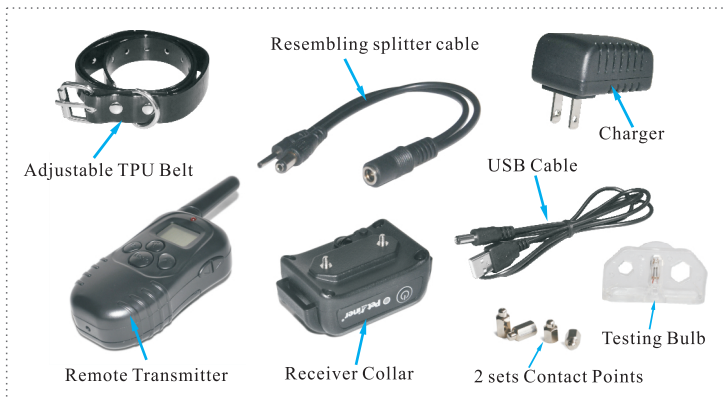

IS-PET998DB 1 for 2

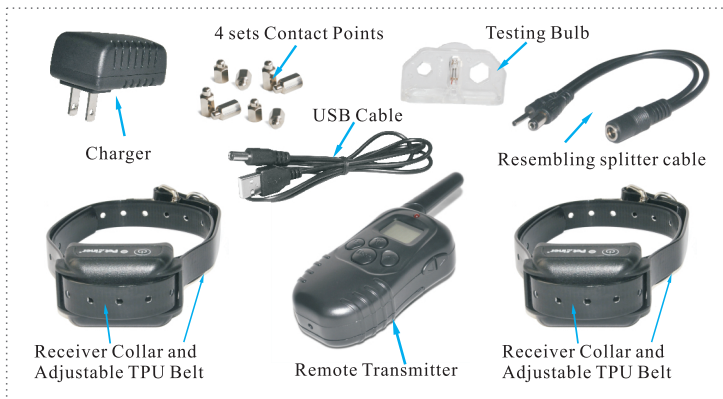 

Key Definition

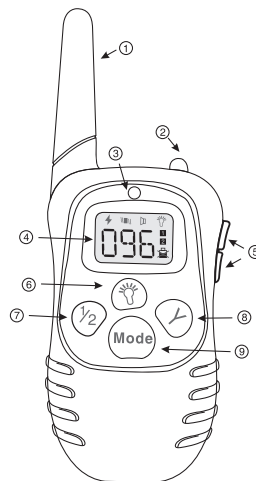 

1. Antenna
 2. Led light
 3. LED Indicator
 4. LCD Screen
 - 000 1-100 level
 - ⚡ Static shock mode
 - 🔊 Vibration mode
 - 🔊 Beep mode
 - 💡 Light mode
- ❶ Channel 1
 - ❷ Channel 2
 - 🔋 Low Battery Indicator
 5. Up/down button
 6. Led light button
 7. Channel button
 8. Launch button
 9. Mode button
 10. Charging hole
 11. Lithium battery



- 1. Antenna:** transmit the signal to Receiver Collar
- 2. Led light:** this light will be on when pressing LED light button
- 3. LED Indicator:** this light will flash when transmitter works, or when charging, this light will be on.
- 4. LCD Screen:**
 - Static mode: under this mode, press Y button, Receiver will shock; press Up/down button, can adjust Static level from 0 to 100
 - Vibration mode: under this mode, press Y button, Receiver will vibrate; press Up/down button, can adjust Vibration level from 0 to 100
 - Beep mode: under this mode, press Y button, the receiver collar can get a "beep" sound
 - Light mode: under this mode, press Y button, the green LED light in the receiver will flash every one second, it is convenient to let you know where your pet is.
 - Channel 1: select to encode between transmitter and one of receiver collar
 - Channel 2: select to encode between transmitter and 2nd of receiver collar
- 5. Up/down button:** Intensity level button for Vibration and Static Shock.
- 6. Led light button:** when pressing the LED light button, the led light in the Transmitter will be on

7. **Channel button:** press this button, can select to encode between transmitter and one of receiver collar, or between transmitter and 2nd of receiver collar.
8. **Launch button:** after you finish mode selecting, press this button for confirmation.
9. **Mode button:** include 4 modes as Static Mode, Vibration Mode, Beep Mode and Led light Mode.
10. **Charging hole:** charge for Remote Collar.
11. **Lithium battery:** 3.7V 240 mAh LiP.

On/ Off/Encode Button
turn on/off the Receiver Collar and hold it to enter encoding status



Charging holes: Charge for Receiver Collar

Rubber Cover:
Seal charging hole to keep from dust

Contact Points:
Deliver the safe static correction

A When charging the battery, the red LED light shows up and changes to green LED after fully charged

B In LED Light mode, press the launch button, the green LED in the Receiver Collar will flash every one second

C When Standby, the Receiver Collar will flash green LED light every four seconds

D After turn on the Receiver Collar, press and hold the On/Off/Encode button for 5 seconds to enter encoding period. The green LED light will keep flashing for 10 seconds to indicate the encoding time.



A B C D

Features

1. Chargeable Remote Transmitter and Receiver collar
2. Waterproof Receiver Collar your pet can swim in the water
3. 100 levels of vibration
4. 100 levels of static shock (optional)
5. The levels can be altered by pressing Up & down button.
6. In beep mode, it activates a tone on the receiver..
7. In LED light mode, it activates a flashing green LED light every one second
8. Power save:
 - The receiver collar will go into deeply sleep if no operation for 5 minutes. And any movement will activate the receiver.
 - The transmitter will go into STANDBY MODE if there is no operation after 2 minutes and go into deeply sleep after 5 minutes, press any button except LED light button can activate the transmitter from Standby mode and press Mode button for 5 seconds to activate the transmitter from deep sleep mode.

9. The system can be used for 1 or 2 Receiver Collars.

10. Two pairs of metal prong (short/long) to suit dogs with varied fur thickness.

How the Pettrainer Rechargeable and Waterproof Training Collar Works

Petrainer Rechargeable and Waterproof Training Collar has been proven safe, comfortable, and effective for all pets over 8 pounds. This system assists you in controlling your pet without a leash in a range up to 300m. At the push of a button, the Remote Transmitter sends a signal, activating the Receiver Collar. Using the Remote Trainer consistently and correctly, much misbehavior that you pet exhibits can be corrected or any basic obedience commands can be taught.

Important: The Remote Trainer has a range up to 300m. Depending on the way you hold the Remote Transmitter, the range may vary. Hold the Remote Transmitter in a horizontal position away from your body to achieve optimum range. Terrain, weather, vegetation, transmission from other radio devices, and other factors will affect the range of your Remote Trainer.

Operating Guide

Step 1 Prepare the Remote Transmitter:

Charge the Remote Transmitter

1. Connect the charger connector to the charging hole.
2. Plug the charger into a standard outlet
3. The red light on the Transmitter will be on
4. Charge the Transmitter at least 6 hours for the first charging
5. After fully charged, the red led will be turned off automatically.

Low battery indicator: the symbol  will show up on the right down side of LCD screen when it need to recharge

How to use the Remote Transmitter

1. To turn on/off the Transmitter, hold the Mode Button for 5 seconds.
2. Set to the different modes by pressing the Mode Button-The LCD images will change from    

3. Press up/Down buttons on right hand to set Vibration or Static Shock level.
4. Choose different channel for 1or 2 Receiver Collars.
5. The Remote Transmitter will go into STANDBY MODE if not operated for 2 minutes and will TURN OFF if no operation for 5 minutes.
6. In STANDBY MODE, press any button (except LED light button) to wake it up. When turn off , hold the Mode Button for 5seconds to TURN ON.



Step 2 Prepare the Receiver Collar:

Charge the Receiver Collar

1. To TURN ON the Receiver Collar, press the on/off button, after a beep, the green LED will be on and flashing every 4 seconds and it is in working mode.
2. Open the rubber cover and Connect the charger connector to the charging hole.
3. Plug the charger into a standard outlet .
4. The red LED will be on (A).
5. Charge the Receiver Collar at least 6 hours for the first charge.
6. After fully charged, the red LED light will be turned to green LED light automatically (B).
7. Put back the rubber cover to keep charging jack clean.
8. If the battery is needed to recharge, the receiver collar will beep for 20 seconds.

Note: Please check whether the battery needs to recharge before you use it. When you turn the receiver on, if there are beeps for 20 seconds, you need to recharge it before using.



Step 3 Encode between Remote Transmitter and Receiver Collar:

1. Turn on the Remote Transmitter by pressing the Mode Button
2. Choose channel 1 or 2
3. Turn on the Receiver Collar by pressing on/off button or if it 's already turned on
4. Then Press the on/off button again and hold it for 5 seconds, the LED light will start to flash
5. You can hear 1st beep from the Receiver Collar, press Y button of Remote Transmitter immediately.

Note: Encode has to be finished within 10 seconds after 1st beep from the Receiver Collar, that means you have to press Y button quickly or at least press it within 10 seconds.

6. You will hear 2nd beep from the Receiver Collar, which means Encode is successfully.
7. For 2nd Receiver Collar Encode, repeat step 2 to 5, please be sure to choose different channel from 1st Receiver Collar.

Note: Factory's fault set is to encode within 10 seconds after turning on Receiver Collar, so when you encode with 1st Receiver Collar, please don't put two Receiver Collars in the Encoding status at same time to avoiding encoding at the same channel

Step 4 To Test Pettrainer Rechargeable and Waterproof Training Collar:

The static impulse released by the Receiver Collar can not be seen with naked eye. You can test the Stimulation by this way:



 
Test Static Shock Function

- Take out the test bulb from the package and wind its metal wire on the Receiver Collar's Contact Points.
- Press Mode button of Remote Transmitter, switch to Shock Mode, confirm LCD display not to be 0, you can press UP/DOWN button on the right side to adjust.
- Press Y button, test bulb will flash, that means Shock function works.



Test Vibration Function

- Press Mode button of Remote Transmitter, switch to Vibrate mode, confirm LCD display not to be 0, you can press UP/DOWN button on the right side to adjust.
- Press Y button, Remote Collar will vibrate, that means Vibration Function works.

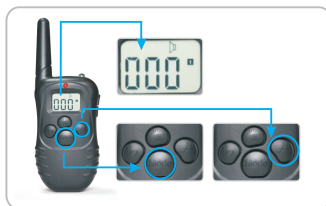

Test Beep Function

- Press Mode button of Remote Transmitter, switch to Beep Mode.
- Press Y button, Remote Collar will beep, that means Beep Function works.



Test LED Light Function

- Press Mode button of Remote Transmitter, switch to LED Light Mode .
- Press Y button, Remote Collar will flash, that means LED Light Function works.

Note:

I: If LCD of Remote Transmitter does not display, there is probably two reasons:

1. Lightly Standby : In order to save power, the Remote Transmitter will go into Standby Mode if there is no operation after 2 minutes, press any button except LED Light Button can activate Remoter Transmitter, LCD will display.
2. Deeply Sleeping: In order to save power, the Remote Transmitter will go into Deeply Sleep Mode if there is no operation after 5 minutes, hold Mode button 5 seconds can activate the Remote Transmitter, LCD will display.

II: The receiver collar will go into deeply sleep if no operation for 5 minutes. And any movement will activate the receiver.

If Receiver Collar has no respond when you press Y button, and Indicator light of Receiver collar is not on either, you can shake Receiver Collar of let dog move, Indication light of Receiver Collar will show green and means Receiver Collar is activated and will work..

III: When test you can choose any mode except LED light, anyway when you are under Vibration or Static Shock mode, Intensity Level can not be 0, you can press UP/DOWN to adjust.



 
Step 5 Fit The Receiver Collar with your dogs:

5

Important: the proper fitness and placement of your collar is important for effective training. The Contact Points must have direct contact with your pet's skin on the underside of his neck.

To assure a proper fit, please follow these steps:

1. Have your pet standing comfortably (3A).
2. Centre the Contact Points underneath your pet's neck, touching the skin (3B). If your pet has a long or thick coat, please use longer Contact Points, we enclosed 2 sets Contact Points, short ones and longer ones.

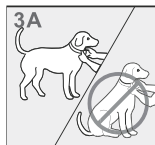

CAUTION There are 100 levels for Vibration and Stimulation. The strong Stimulation can penetrate the hair of the pet within 6mm thick. Do not shave the pet's neck as this may increase the risk of skin irritation.



3. The Collar should fit snugly, yet loose enough to allow one finger to fit between the strap and your pet's neck (3C)



4. Allow your pet to wear the collar for several minutes then recheck the fit. Check the fit again as your pet becomes more comfortable with the Collar. If your pet's neck is less than 12" around, you will need to thread the part of the collar which includes the antenna through the buckle. It will be a tight fit.

 
CAUTION Risk of skin damage.

- For comfort, safety and effectiveness of this product. Please ensure that you check the fit of your pet's collar frequently. If any skin irritation is observed, discontinue the use of the collar for a few days. If the condition persists beyond 48 hours, see your veterinarian.
- Do not attach a leash to the Collar. This can result in pulling the Contact Points too tightly against your pet's neck. You may put a separate nonmetallic collar on your dog's neck and attach a leash.

- Do use a harness of attaching a leash and/or tags while using the Collar.
- The Receiver Collar is not designed to be worn constantly. We recommend the Collar not be worn for more than 12 hours out of every 24-hour period.
- Most pets feel uncomfortable at first wearing the collar. Don't use any functions before the pet has gotten used to the collar.
- We suggest you give the dog Vibration before starting the Static Shock. After a time of training, the dog will learn that Stimulation will come after Vibration. In this way, the vibration alone can effectively curb the improper deeds of the pet. The Stimulation only acts as a menace that might be unnecessary for most of the time.

Step 6 Re-Thread the Collar (as diagram)

6

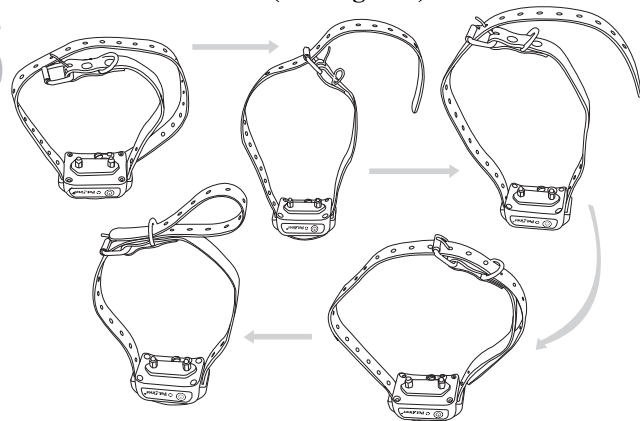

Regular Maintenance

- Check Contact Points for tightness weekly
- Clean Contact Points with alcohol weekly

Note: remove the battery and discharge Regular the Bark Automatic Control Collar before touching the Contact Points

- Check your dog's neck for irritation and wash neck weekly.

Frequently Asked Questions

How old does my pet have to be before using Pettrainer Rechargeable and Waterproof Training Collar?

Your pet should be able to recognize basic obedience commands such as "Sit" or "Stay" Pettrainer Rechargeable and Waterproof Training Collar may be too large for pets under 8 pounds.

Once my pet is trained and has been obeying my commands, will have to continue to wear the Receiver Collar?

Probably not. You may need to reinforce training with the Receive Collar from time to time.

Can I use Pettrainer Rechargeable and Waterproof Training Collar with more than one pet?

Yes, you can simply add one more receiver collar to the system.

Will I get exactly 328 yards of range with the Remote Trainer?

The effective range of the Remote Trainer means the straight-line distance between Remote Transmitter and Receiver Collar without obstacles in between. Range may vary according to terrain, weather, vegetation, battery capability as well as transmission from other radio devices.

How long can I continuously deliver vibration or Static Shock to my pet ?

The maximum amount of time you can press the Vibration or Static Shock to your pet continuously is 10 seconds. After this, the Remote Transmitter will time-out, and the Vibration or Static Shock must be released and pressed again.

Is the Receiver Collar waterproof

Yes, your pet can swim in the water

What do I do If my pet's neck becomes red and irritated?

Discontinue use of the Pettrainer Rechargeable and Waterproof LCD Remote Pet Training System for a few days. If the condition persists beyond 48 hours, see your veterinarian. Once the skin returns to normal, monitor your pet's skin condition closely.

Can I place Receiver Collar on another collar?

NO. The collar used for this unit has a sleeve to hold the Antenna.

Can I attach a leash to the Receive Collar?

NO. This can result in pulling the Contact Points too tightly against your pet's neck. Use a separate collar placed above the Receiver Collar.

How will I know when to charge the batteries?

For Remote Transmitter: the symbol  will show up on the right down side of LCD screen. For Receive Collar: If you hear the beep for 20 seconds or when you turn on the Receiver collar, it beeps for 20 seconds.

How long is your lithium battery lifetime?

Our Lithium battery can charge 400 times for remote Controller and Receiver Collar.

How long can I leave Receiver Collar on my dog?

The Collar is not designed to be worn constantly. We recommend the Collar not be worn for more than 12 hour out of every 24-hour period.

How long should I Process my training session for my pet?

Training sessions should be kept positive and short, it is better for about 10-15 minutes long each time.

What kind of dogs are your Pettrainer Rechargeable and Waterproof Training Collar suitable for?

The collar is adjustable from length 5.9" (15cm) to 19.6" (50cm), if your pet's neck is smaller than 5.9", you have to rethread it, if your pet's neck is larger than 22" , please don't buy it: and this Collar is not suitable for the dogs less than 8 pounds either.

Troubleshooting

My pet does not respond after correct installation Pettrainer Rechargeable and Waterproof Training Collar, or it does not work?

- You need charge Remote Transmitter and Receiver Collar for 6 hours individually first.
- You need to turn on the Remote Transmitter By holding the Mode button for 5 seconds.
- Check the levels of vibration or static shock.
- Make sure the Receiver Collar has enough power to operate.
- Restart the Receiver collar by pressing the on/off button.
- Test 4 functions (Beep, Light, Vibration and Shock) first before using. See part "Test" of Operation Guide.
- Intensity level has to be more than "0" when encode, test to launch for Vibration and Static Shock Function.
- The Receiver collar will go into deeply sleep if no operation for 5 minutes. And any movement will activate it.
- Make sure the Contact Points are placed snugly against your pet's skin.
- Trim your pet's fur where the Contact Points touch the neck and/or switch to the longer Contact Points.
- If all of above does not work, you can try reencode between Remote Transmitter and Receiver Collar. (See part "Encode" of Operation Guide)

Remote Transmitter does not work

- You need charge Remote Transmitter for 6 hours when you get product first time.
- Check if Remote Transmitter is on low battery status, the symbol  will show up on the right down side of LCD screen.
- You need to hold the Remote Transmitter for 5 seconds for turning on it.
- Remote Transmitter will automatically goes into standby mode if no action is detected with 2 minutes, at this time there will be no LCD display. Press any button except LED light button to re-activate the Remote Transmitter.

- Remote Transmitter will automatically goes into deeply sleep status if no action is detected within 5 minutes. at this time there will be no LCD display. You have to press "Mode" button for 5 seconds until LCD display.

My Receiver Collar works great for some time, but it does not work anymore after I charged.

- First, check if charging is successful, when you are charging, red LED light will be on, after fully charged, the red led light will be turned to green LED light automatically.
- You have to turn on Receiver Collar again after you charged

We turned on the receiver collar and it starts to beep for 20 seconds.

- Receiver Collar will beep for 20 seconds in Low battery status unless it gets charged, charge it for 6 hours and the other functions will work after charging finished.

I want to test Receiver Collar myself, but it does not work.

- If you test Receiver Collar by your hand or leg, please touch the 2 electrodes at the same time, only touch one electrodes will not work.

The Receiver Collar is in bad quality, it didn't work after knocking down

- Our Receiver Collar is designed to be not knock-down, please don't knock down it avoiding breaking structure and circuit.

Find the Best Intensity Level for Your Pet

General Tips

- Eliminate one misbehavior or teach one obedience command at a time. If you move too fast with the training, your pet may become confused.
- Be consistent. Give your pet a tone or stimulation with each misbehavior.
- Do not over-correct your pet. Use as few stimulations as possible to train your pet.
- Unless you can supervise him, it is recommend that you restrict your pet from situations in which he has a history of misbehaving. However, setting up a situation as a training session can dramatically improve your chances of success.
- If your pet reacts to the training by hiding or acting fearful, redirect his attention to a simple and appropriate behavior such as the "Sit" command.

Common size of different dogs				
Size	Neck (cm)	Chest Measurement (cm)	Back Length (cm)	Type
Mini	20-22	25-30	19	Chihuahua, Yorkshire Temier
Small	20-24	29-36	23	Chihuahua, Yorkshire Temier, Poodle, Pomeranian
Medium	23-28	35-42	28	Maltese Dog, Shih Tzu
Large	27-31	41-47	31	Miniature Schnauzer, Pekingese
Large	30-34	46-53	35	Schnauzer, English Cocker Spaniel
Large	33-37	52-59	40	Beagle
Huge	43-48	76-84	60	Husky
	47-52	88-97	65	Labrador Retriever
	52-62	92-100	70	Golden Retriever, Old English Sheepdog

Common weight of dogs

Large Dog (Body height above 61cm, Weight above 40kg)

Medium Dog (Height 40.7-61cm, Weight 11-30kg)

Small Dog (Height 25.5-40.7cm, Weight 4-10kg)

Mini Dog (height under 25cm, Weight under 4kg)